




3

2

1

- 1 - Adapter, Hydraulic Motor
- 2 - Coupling, Shaft
- 3 - Key, 1/4" Square x 1" Long

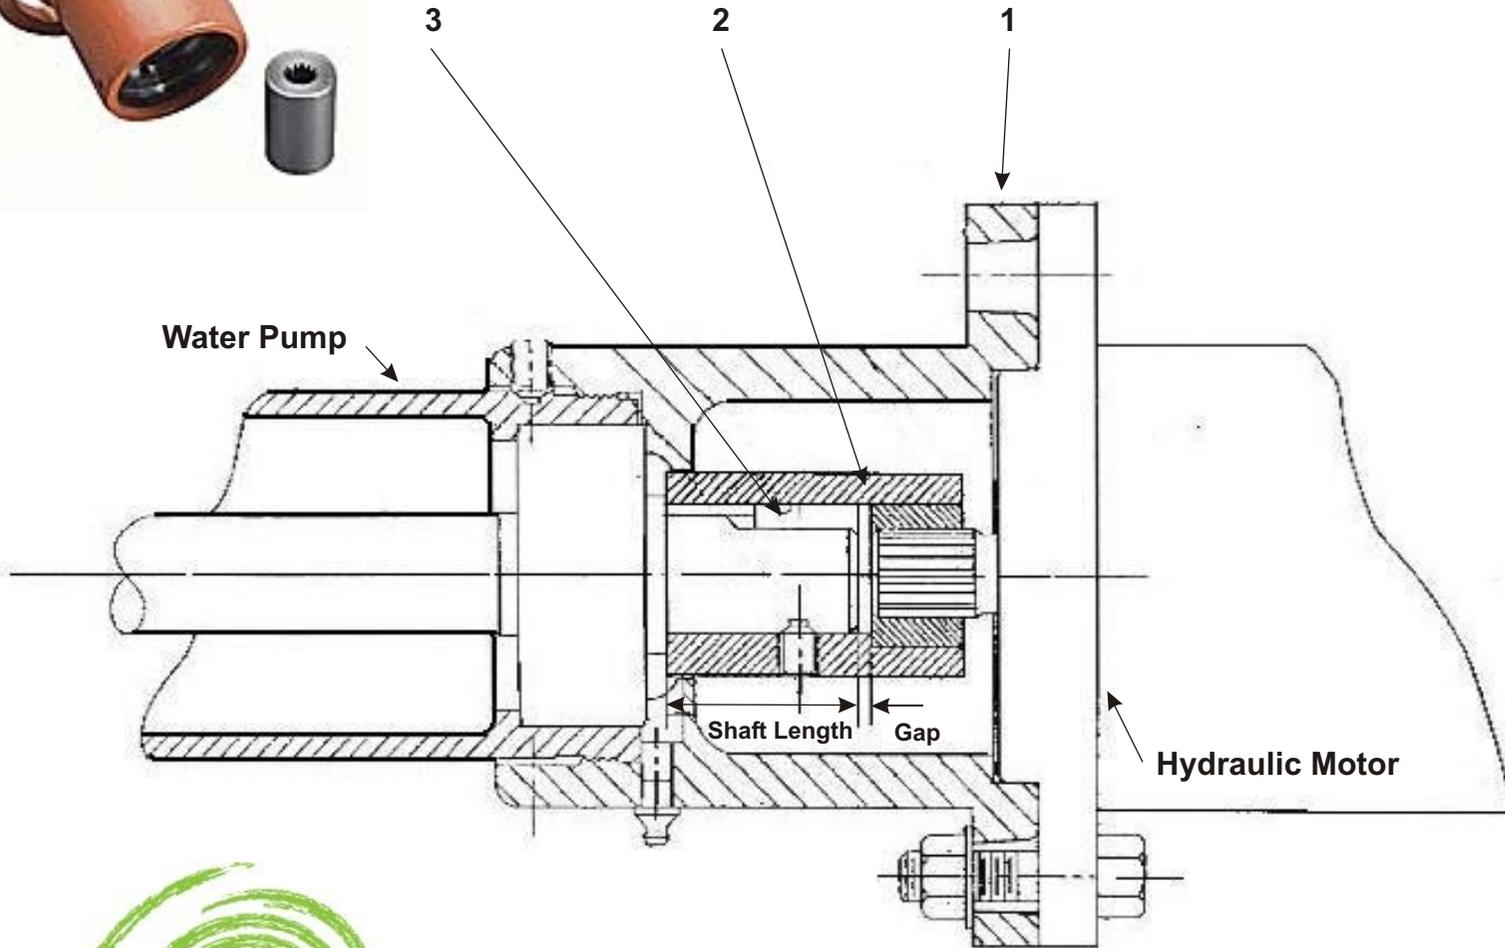

1 300 306 917

www.watertrucks.com

Fitting Instructions - Water Pump Adapter for Hydraulic Motor

- Unscrew and Remove Outer Bearing Cap from Water Pump
- Cut Shaft Length to 1 13/16" or 46mm (Gap 3/32" or 2.4mm)
- Assemble coupling on Water Pump shaft and tighten set screw.
- Screw Hydraulic Motor adapter onto Water Pump and tighten set screws.

Note: Use anti seize compound on all joints.